


Model BD-6 FrontAdjustable Sight Rib Adjustment Recommendations

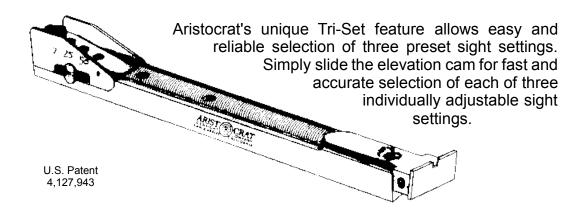

Aristocrat's wide range of adjustments make possible almost any combination of sight settings. The following is just one example of what may be achieved.

The primary sight adjustments are made using the three set screws in the front sight leaf. Sighting in is accomplished as follows: First adjust the set screw closest to the front sight. Using the 1/16" Allen wrench furnished so that the front sight leaf is raised off the base about the thickness of this paper, with the sliding cam in the 7 yard position.

Next use the elevation screw in the rear sight leaf to sight in for center hold at 25 yards. This setting generally will also work well for the 7 and 15 yard positions. The elevation screw in the rear sight leaf is not a fine adjustment screw and once set in this manner is used only to compensate for lighting and ammunition variables.

Now the sliding cam may be moved to the <u>25 yard</u> position. The center screw is now adjusted to a head or neck hold at 25 yards.

Last, move the sliding cam to the <u>50 yard</u> position. Adjust the set screw furthest from the front sight for a head or neck hold at 50 yards.

Your new Aristocrat sight rib is a piece of precision shooting equipment and like your target revolver, it must be kept clean to operate reliably.

Aristocrat Products Inc.
PO Box 2850
Mountain Home, AR 72654
Tel. (626) 339-4045 Fax (626) 339-4063
www.aristocratproducts.com / Email info@aristocratproducts.com